Instructions for Use

Retractable Key Cable Lock

CODi®

Congratulations!

Your notebook key cable lock gives you extra protection for the security of your notebook computer.

Cable lock features include:

- 4 Foot Retractable Cable
- Integrated lock fits all micro slots. Hardened steel tail pin
- Unique pressure sensitive locking mechanism makes security a breeze.
- Re-settable combination allows end user to re-set combination by following the enclosed directions.
- Additional spacer included to ensure a snug fit.

LIMITED LIFETIME WARRANTY

CODi® offers a limited lifetime warranty to the original purchaser that it's products are free from defects in material and workmanship. If, after inspection, you discover any defects in material or workmanship, CODi ® will have the option to repair, or, replace the defective CODi ® product free of charge. This limited lifetime warranty does not cover damages from normal wear and tear or from accidental damage, misuse, improper care, alterations, and damage caused in transportation by a common carrier or airline.

Under no condition is CODi ® responsible for the following: normal wear and tear; loss or damage to a computer; loss or damage to peripherals; loss or damage to programs; loss or damage to a computer; loss or damage to peripherals; loss or damage to programs; loss or damage to files, records, or data; loss or damage to income.

There are no other warranties expressed or implied, including, but not limited to, the implied warranties of merchantability and the fitness for a particular purpose beyond the terms of this limited warranty. The limited lifetime warranty offered by CODi herein may not be modified by any oral representations made by any employee, agent, or representative of CODi ®. This limited warranty gives you, the original purchaser, specific legal rights and you may have other rights, which very, from state to state.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. CODi ® SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

INSTRUCTIONS

Locking

(1) Press the retract button (a) and pull the lock head out of the housing (b) allowing enough cable to loop around an immovable object

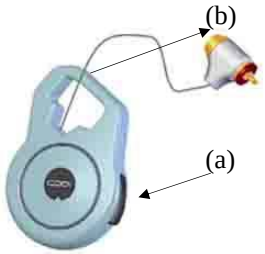

(2) Once you have enough cable, loop the cable around an immovable object such as a table leg (c) or anchor. Then slide the lock head back through the opening in the housing.

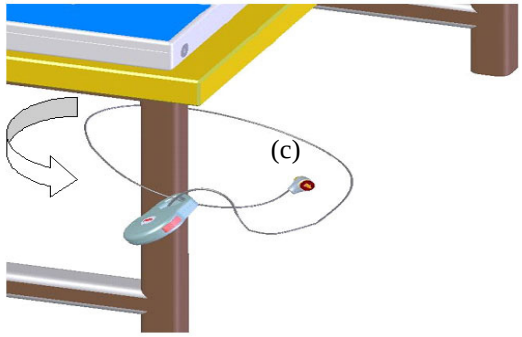

(3) Locate the security slot on your laptop or computer (d). Insert the pin of the lock head into the security slot (d), and push the key barrel on the back of the lock (e) until you hear a click. Your computer is now secured.

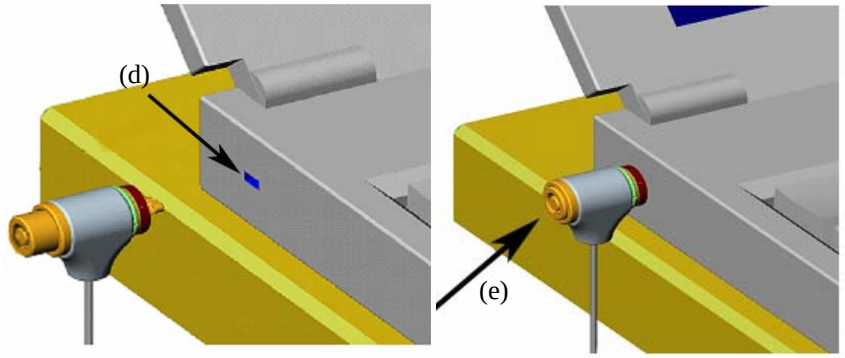

Unlocking

(4) To secure your CODi® laptop carrying case, loop the cable around an immovable object such as a table leg or anchor. Then loop the cable through your carrying case handle (f).

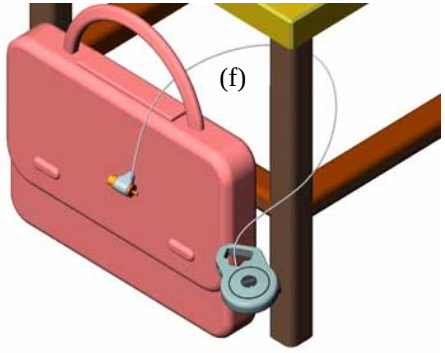

(5) Insert the pin of the lock head into the security slot located on the side of the housing (g). Your CODi® laptop carrying case is now secure.

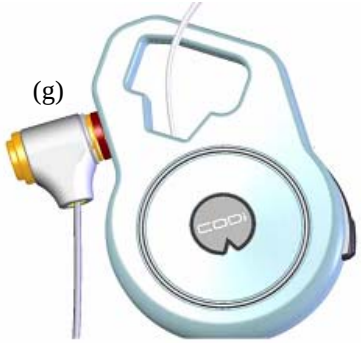

(6) Insert the key into the key barrel and turn the key clockwise (h). The barrel will extrude out of the lock head to the unlock position (i). You can now remove your lock from the security slot.

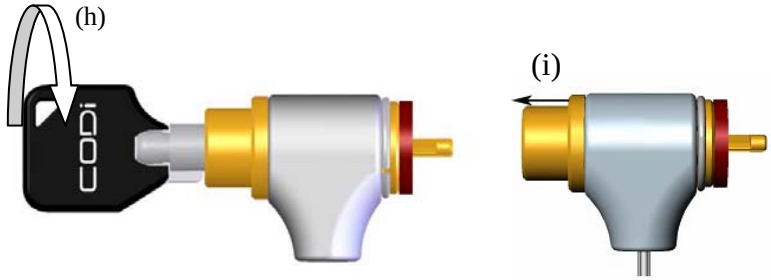

Restoring the lock head back into the housing

(1) Take notice to the recessed square on the inside of the housing (a)

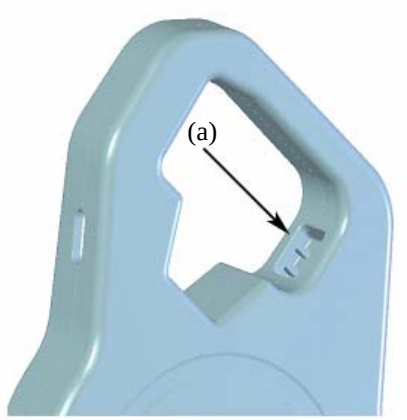

(2) Make sure the key barrel is in the unlocked position. Place the pin of the lock head into the recessed square located inside the housing (b).

(b)

(3) Lightly press key barrel so it's halfway between the lock and unlock position and slide the lock head into the opening (c)

(c)

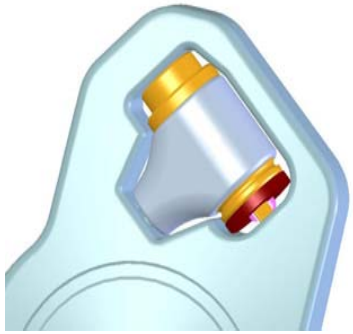

(4) Press the retract button again to insure that the cable is fully retracted (d). This allows the lock head to sit securely in the housing during travel or non-use.

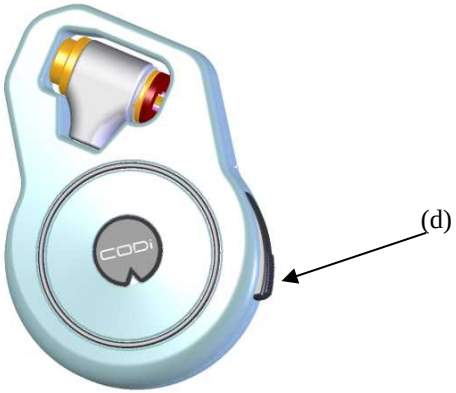

Key